

## Stereo Audio Selector

Your RadioShack Stereo Audio Selector lets you connect as many as three line-level audio sources to your stereo receiver/amplifier's auxiliary input.

You can connect a CD player, VCR, cassette tape player, or other audio source to your receiver/amplifier and select any of these sources for play without the hassle of unplugging and reconnecting cables.

### CONNECTING THE AUDIO SELECTOR

Use shielded audio cable with phono plugs for all connections. Be sure you connect left and right channels correctly (left to left and right to right) to maintain proper stereo separation.

*(ILLUS))*

1. Connect the output jacks of each of your three audio sources (such as a CD, stereo VCR, or stereo TV) to your stereo audio selector's **AUX 1**, **AUX 2**, and **AUX 3** input jacks.
2. Connect your audio selector's output jacks to the amplifier/receiver's input jacks (AUX, CD/AUX, or TV/AUX).

### USING THE AUDIO SELECTOR

**Caution:** To avoid damaging your receiver/amplifier or speakers, set the audio source's and receiver/amplifier's volume controls to minimum before selecting that source.

To select the desired audio source, press the selector button — **1**, **2**, or **3** — on your audio selector's front panel that matches the number of the jack (**AUX 1**, **AUX 2**, or **AUX 3**) where you connected the audio source.

**Note:** Be sure you select the proper input switch setting (AUX, CD/AUX, or TV/AUX) on your receiver/amplifier.

### CARE AND MAINTENANCE

To enjoy your RadioShack Stereo Audio Selector for a long time:

- Keep the audio selector dry. If it gets wet, wipe it dry immediately.
- Use and store the audio selector only in normal temperature environments.
- Handle the audio selector gently and carefully. Don't drop it.
- Keep the audio selector away from dust and dirt.
- Wipe the audio selector with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the audio selector's internal components can cause a malfunction and invalidate its warranty. If your audio selector is not performing as it should, take it to your local RadioShack store for assistance.



**SPECIFICATIONS**

(Output readings are taken across a non-reactive 47 kohm load.)

Channel Separation @1 kHz .....	60 dB
	Input 150 mV and 4.7 kohm terminated
Crosstalk Between Functions @1 kHz .....	70 dB
	Input 150 mV and 4.7 kohm terminated
Dimensions .....	1 11/16 ¥ 5 5/16 ¥ 3 3/8 Inches (HWD)
	(43 ¥ 135 ¥ 85 mm)
Weight .....	8 oz (200 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

**RadioShack**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

**RADIO SHACK**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**

### **Limited Ninety-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

*We Service What We Sell*

3/97

**RADIO SHACK**  
**A Division of Tandy Corporation**  
**Fort Worth, Texas 76102**